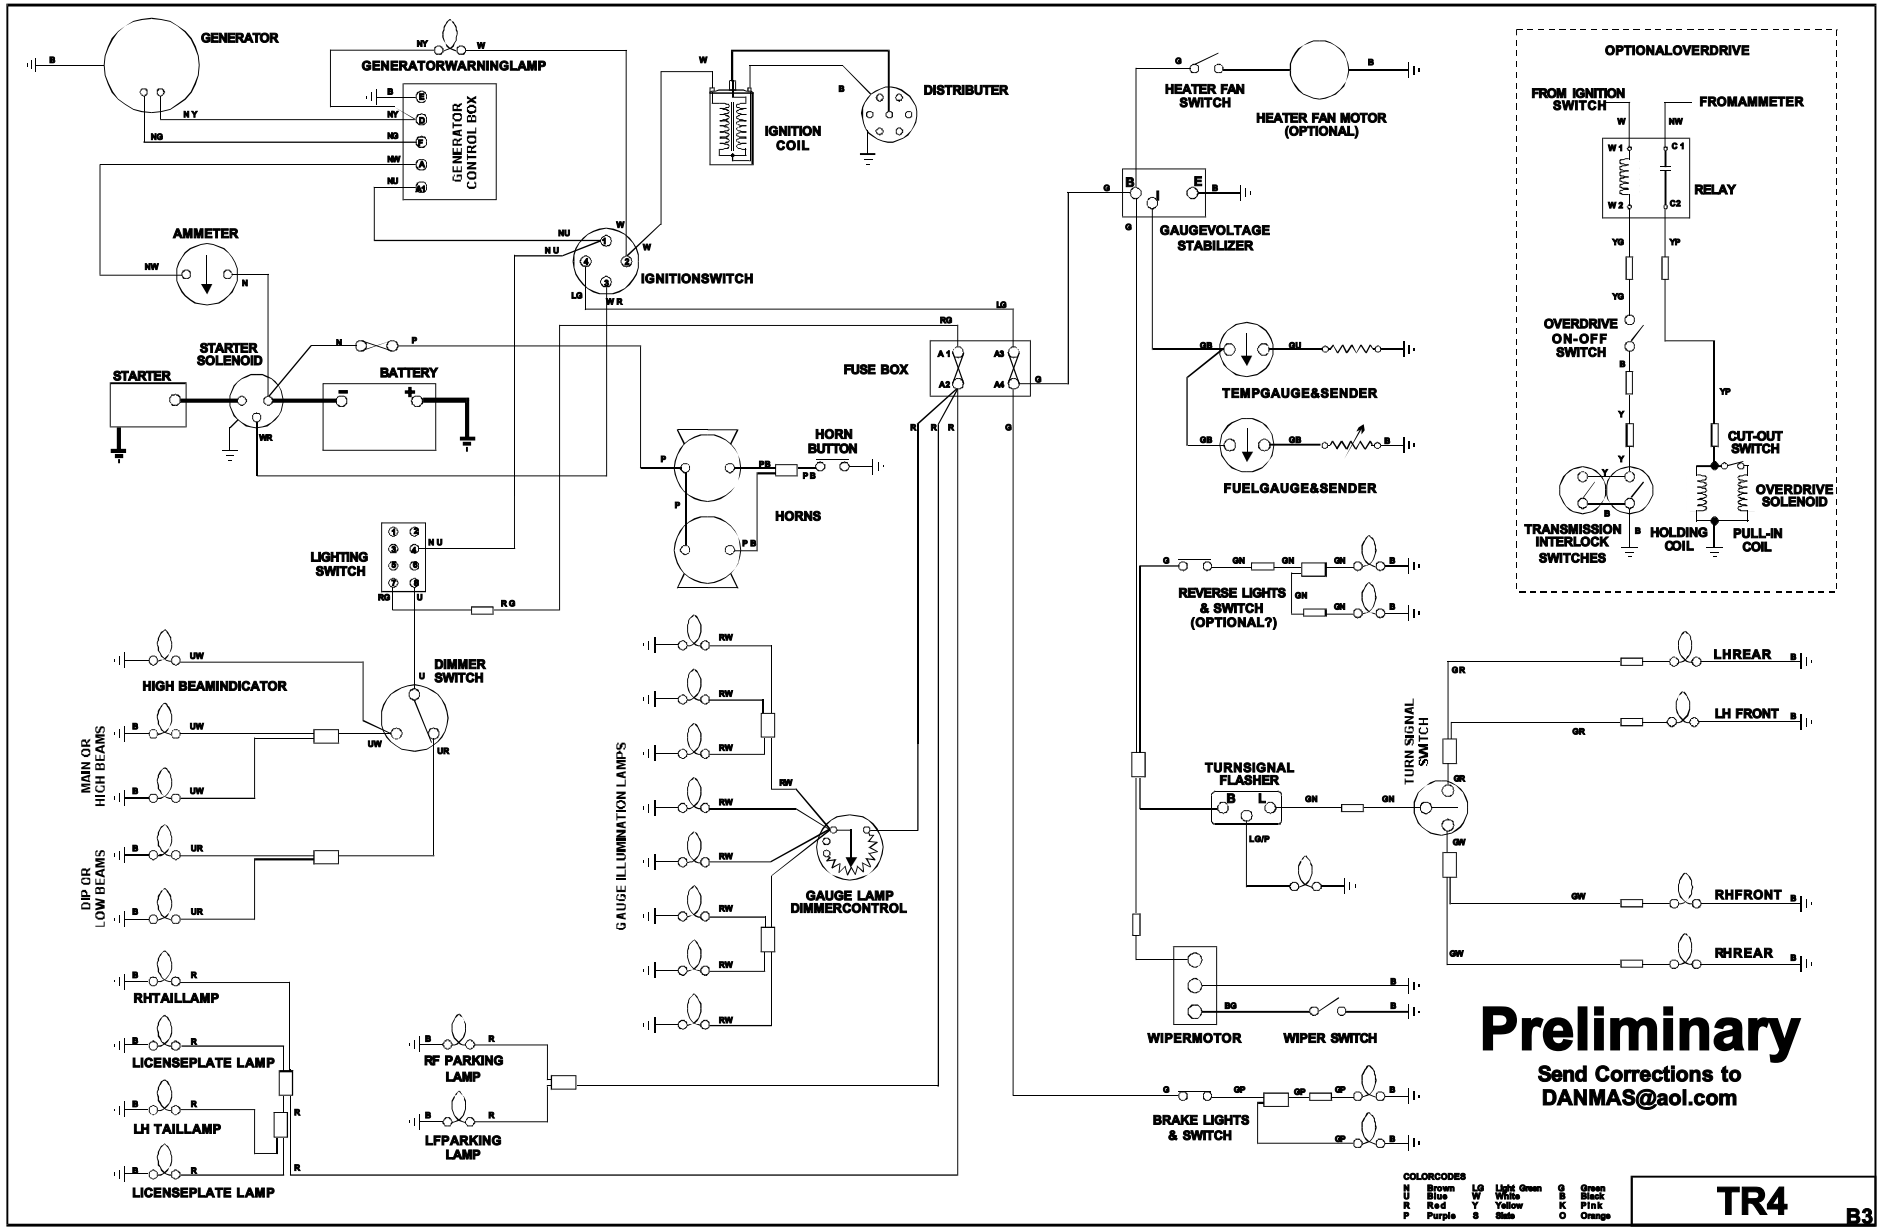
GENERATOR
GENERATORWARNINGLAMP
GENERATOR CONTROL BOX
AMMETER
STARTER SOLENOID
STARTER
BATTERY
IGNITION COIL
DISTRIBUTER
IGNITIONSWITCH
FUSE BOX
HORN BUTTON
HORNS
LIGHTING SWITCH
DIMMER SWITCH
HIGH BEAMINDICATOR
MAIN OR HIGH BEAMS
DIP OR LOW BEAMS
GAUGE ILLUMINATION LAMPS
GAUGE LAMP DIMMERCONTROL
RHTAILLAMP
LICENSEPLATE LAMP
LH TAILLAMP
LICENSEPLATE LAMP
RF PARKING LAMP
LFPARKING LAMP
HEATER FAN SWITCH
HEATER FAN MOTOR (OPTIONAL)
GAUGEVOLTAGE STABILIZER
TEMPGAUGE&SENDER
FUELGAUGE&SENDER
REVERSE LIGHTS & SWITCH (OPTIONAL?)
TURNSIGNAL FLASHER
TURN SIGNAL SWITCH
LHREAR
LH FRONT
RHFRONT
RHREAR
WIPERMOTOR
WIPER SWITCH
BRAKE LIGHTS & SWITCH
OPTIONALOVERDRIVE
FROM IGNITION SWITCH
FROMAMMETER
RELAY
OVERDRIVE ON-OFF SWITCH
CUT-OUT SWITCH
OVERDRIVE SOLENOID
TRANSMISSION INTERLOCK SWITCHES
HOLDING COIL
PULL-IN COIL
Preliminary
Send Corrections to
DANMAS@aol.com
COLORCODES
N Brown
U Blue
R Red
P Purple
LG Light Green
W White
Y Yellow
S Slate
G Green
B Black
K Pink
O Orange
TR4
B3

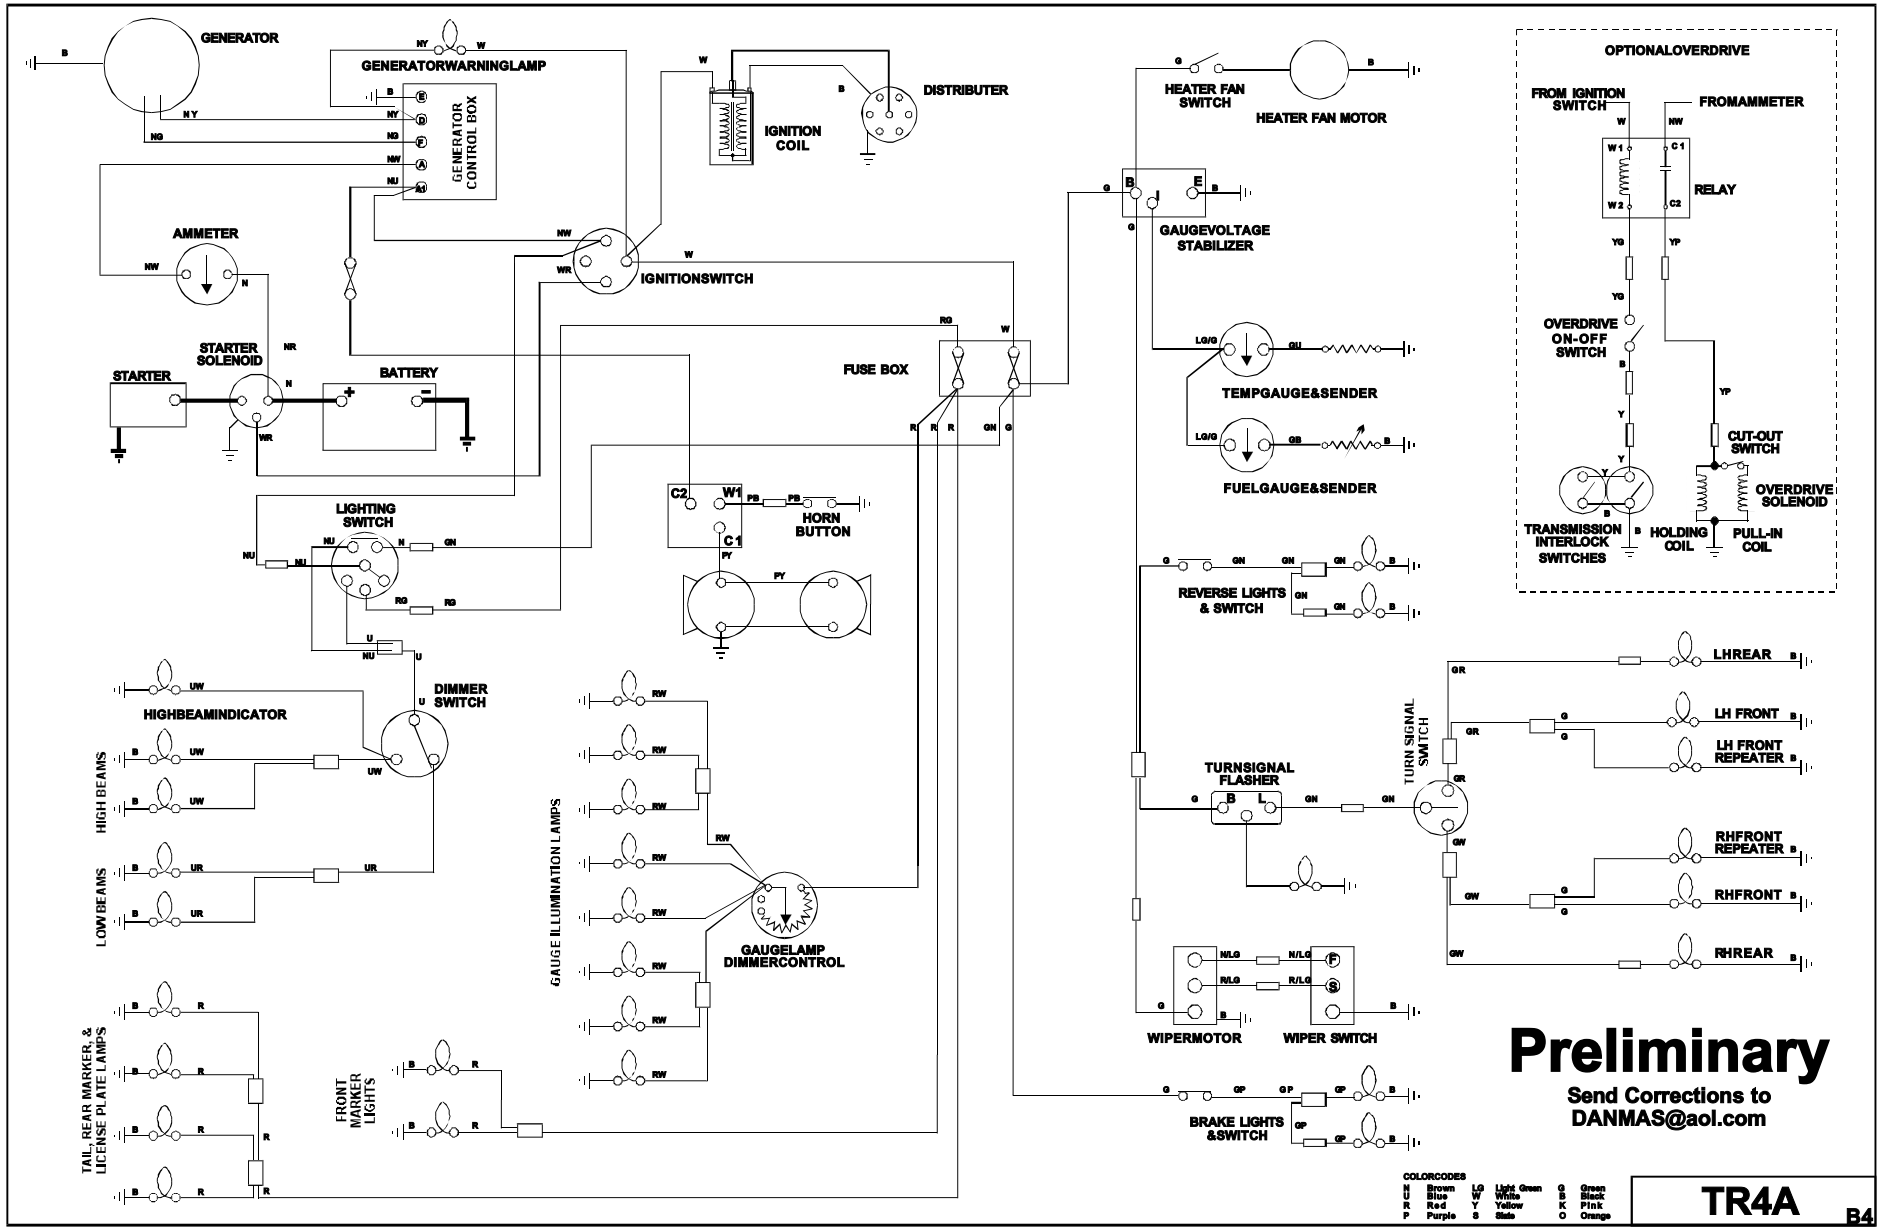
GENERATOR
GENERATORWARNINGLAMP
GENERATOR CONTROL BOX
IGNITION COIL
DISTRIBUTER
AMMETER
IGNITIONSWITCH
STARTER SOLENOID
STARTER
BATTERY
FUSE BOX
LIGHTING SWITCH
HORN BUTTON
HIGHBEAMINDICATOR
DIMMER SWITCH
HIGH BEAMS
LOW BEAMS
GAUGE ILLUMINATION LAMPS
GAUGELAMP DIMMERCONTROL
TAIL, REAR MARKER, & LICENSE PLATE LAMPS
FRONT MARKER LIGHTS
HEATER FAN SWITCH
HEATER FAN MOTOR
GAUGEVOLTAGE STABILIZER
TEMPGAUGE&SENDER
FUELGAUGE&SENDER
REVERSE LIGHTS & SWITCH
TURNSIGNAL FLASHER
TURN SIGNAL SWITCH
WIPERMOTOR
WIPER SWITCH
BRAKE LIGHTS &SWITCH
LHREAR
LH FRONT
LH FRONT REPEATER
RHFRONT REPEATER
RHFRONT
RHREAR
OPTIONALOVERDRIVE
FROM IGNITION SWITCH
FROMAMMETER
RELAY
OVERDRIVE ON-OFF SWITCH
CUT-OUT SWITCH
OVERDRIVE SOLENOID
TRANSMISSION INTERLOCK SWITCHES
HOLDING COIL
PULL-IN COIL
Preliminary
Send Corrections to
DANMAS@aol.com
COLORCODES
N Brown LG Light Green G Green
U Blue W White B Black
R Red Y Yellow K Pink
P Purple S Slate O Orange
TR4A
B4